 
 


Quick Setup Guide

1. Plug in aerial and firmly into the aerial socket ANT IN 75Ω at the back of the TV.
2. Plug the power cord into household mains socket.

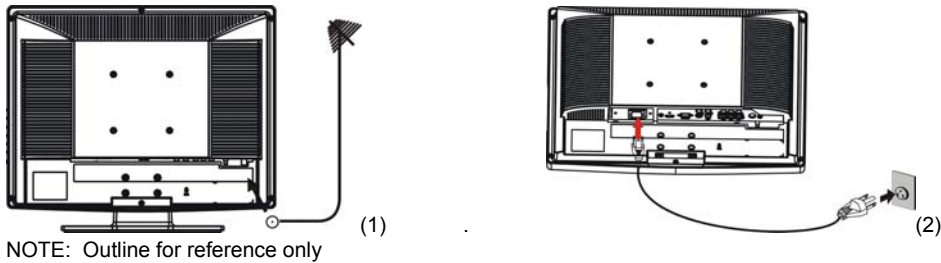

3. Press the "Main Power Switch" on the side of LCD TV to switch TV to stand-by mode and led is lit amber.

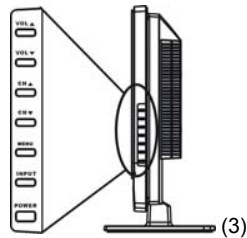

Mounting the TV base:



The TV base will be separated with the TV unit. You should Install the base before you use the TV unit.

1. Place the TV on its face on a soft blanket.
2. Install the base stand with three screws.
3. Place the TV on the table.



PREPARATION


Lay the LCD TV with the screen down on a table, as it will be easier to connect your peripheral equipment. Please take your precautions not to damage the screen.

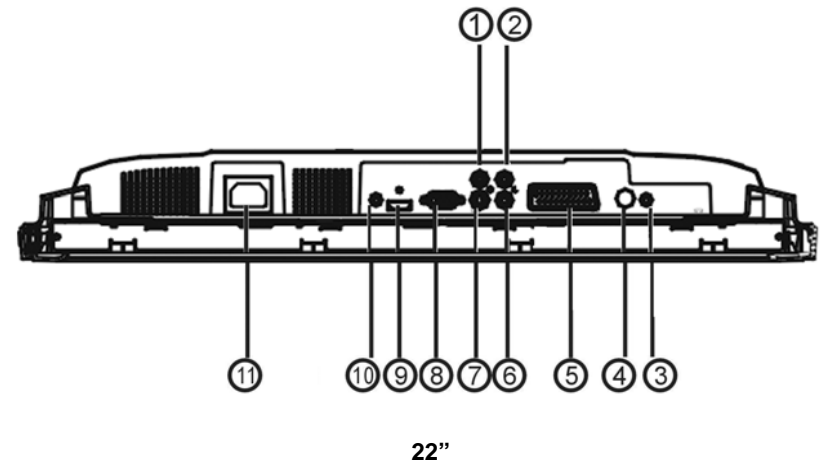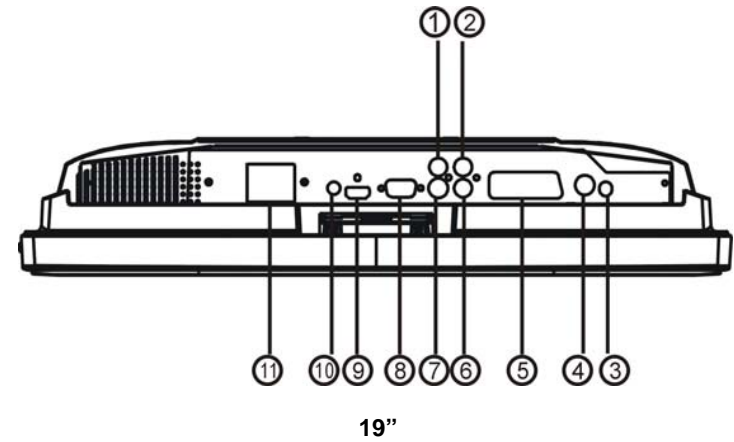

- 1: AV1 signal input
- 2: Right audio track input
- 3: Headphone outlet
- 4: TV signal input
- 5: SCART signal input
- 6: Left audio track input
- 7: S-Video signal input
- 8: VGA input signal input
- 9: HDMI input
- 10: VGA audio input audio input
- 11: AC power input terminal


IMPORTANT NOTES

- There are two ways to turn on the TV set from stand-by mode.
 - Press the switch on the LCD TV and check *green* LED is lit. OR
 - Press the Power button on the remote controller.
- Press **CH** “▲”, “▼” or **MENU** “▲”, “▼” button on the remote controller to brows through the TV channels.
- Press **VOL** “+”, “-” or **MENU** “◀”, “▶” button on the remote controller to adjust the volume.
- Press the **MENU** button on the remote controller into the main OSD (On Screen Display).

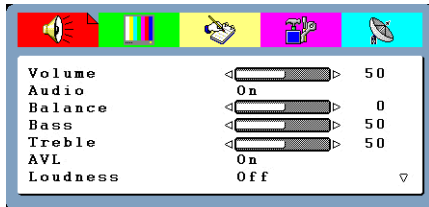


Use the “◀” or “▶” button on the remote controller to select the desired item ,then use “▲”, “▼” button to enter it, and use “MENU” button for exit.

4.1 Select the Language

Press the **MENU** button, and press “▶” button to the  item ,then press “▼” button to “language” and select the desired language.



4.2 Select the Country


Press the **MENU** button, and press “▶” button to the  item , then press “▼” button to selet the desired country .


(for user base in Australia and New Zealand, please select any countries in the TV system PAL-BG section)

TV system

System	Countries
PAL-B/G	Albania, Austria, Bosnia, Slovakia, Denmark, Finland, Malta, Macedonia, Montenegro, Germany, Holland, Norway, Iceland, Italy, Luxemburg, Portugal, Spain, Sweden, Switzerland, Yugoslavia, Slovenia, Cervantes, Romania.
PAL-B/H	Belgium
PAL-I	Britain, Ireland
SECAM-L/L	Luxemburg, France
SECAM-B/G	Greece, Arabia, Morocco
SECAM-D/K	Armenia, Azerbaijan, Belarus, Esthonia, Latvia, Lithuania, Georgia, Ukraine, Russia, Czech, Hungary

4.3 Programme Sorting

After above two steps have been done, press the MENU button to exit the items, then press “▶” button to  item, and press “▼” button to “Autostore”, lastly press “▶” button, it will start to search Programme and store the programme.

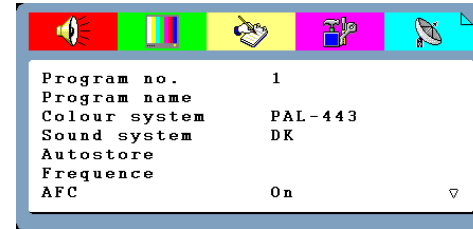


For user in Australia and New Zealand, AOC suggests select “Auto” for Colour system and Sound system, and then press the “▼” button to “Autostore”, lastly press “▶” button, it will start to search Programme and store the programme.


4.4 Programme Naming


Use “**program name**” to sort each channel’s name of your choice.

Press “▼” button to “**program name**” and press “▶” button, then it will start Programme naming. Use the “▲”, “▼” button to select the number or letter. Then press “◀” or “▶” button to next place and the MENU button to store the programme’s name.

5. Move Channel Instruction

- When under  item, press MENU button on the remote control to select the desired channel, system will change to that channel automatically after three seconds.

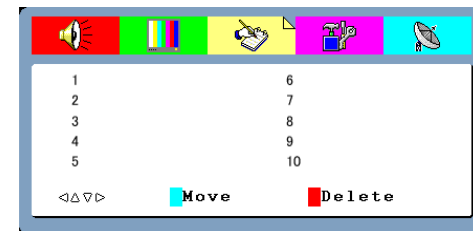

- When under  item, select one channel, press the green button on remote control which means move, then press up/down/left/right buttons beside MENU to select another channel, lastly press green button, so the original channel will be exits after the second channel, other channel numbers will be changed accordingly.